

### QI-400-DC-I













#### **CONTENTS**

Product overview	3
Technical specifications	4
Electrical characteristics	4
General data	5
Order codes	5
Connection and installation	6
Available measurements	7
Measurement configuration	7

#### **OI-400-DC-I** PRODUCT MANUAL





#### **SAFETY WARNINGS AND CAUTIONS**

carrying out any work.

The following warnings and cautions must be observed to ensure personal safety and prevent damage.



Death or serious injury may result from failure to heed this warning.



It is necessary to comply with national regulations when installing and picking materials for power lines.



Material damage or serious personal injury may result from failure to heed this warning.




Repairs and modifications must be carried out only by the manufacturer. It is forbidden to open the case and make any changes to the device. Tampering with the device will invalidate the warranty.



The manufacturer **declines all responsibility** for electrical safety in the event of improper use of the equipment.

Installation and commissioning must be carried out by qualified

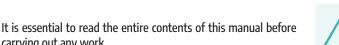



The product described in this document may only be used for the specified application. The maximum performance data and environmental conditions specified in the product data sheet must be observed. Proper transport and storage, as well as professional assembly, installation, handling and maintenance are required for the correct and safe operation of the device.

personnel only. Before commissioning, make sure that: Use under ambient conditions other than those specified, the maximum values for all connections are not exceeded; refer to the product data sheet;



application of signals or voltages other than those specified, may cause significant deviations from the specified measurement tolerances, which may be irreversible.



- the connection cables are not damaged or live during wiring;

- the direction of current flow and phase rotation are correct.

During installation, ensure that a switch or circuit-breaker is near the product and easily accessible.

The unit must be uninstalled if safe operation can no longer be guaranteed (e.g. visible damage). Disconnect all connections in this case. The unit should be returned to the manufacturer or to an authorised service centre for repair.



accuracy, it may contain errors or inconsistencies and we cannot guarantee its completeness or accuracy. This document is subject to periodic revision and updating. QEED reserves the right to make changes to the product and/ or its technical documentation at any time in the interests of

continuous quality improvement. Always consult the latest version of the documentation available on the website:

Although the contents of this document have been checked for



WARNING: High-intensity magnetic fields may alter the values measured by the transformer. Avoid installation near: permanent magnets, electromagnets, or iron masses. If irregularities are detected, reposition or move the unit to a more suitable location.



If you find any errors or missing information in this document, please notify us by e-mail to:

Disposal of waste electrical and electronic equipment (applicable




purchased the product.

www.geed.it



Failure to observe the warnings may result in damage to the equipment or failure to operate as intended.



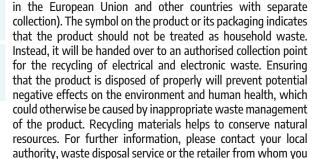



Please note that the information on the nameplate must be observed.






## **QI-400-DC-I**PRODUCT MANUAL

#### **PRODUCT OVERVIEW**

The QI-400-DC is a DC converter that is galvanically isolated from the measurement circuit. It is similar in function and appearance to a standard active current transformer, but is capable of measuring the DC component.

They are powered by a 4-20mA current loop and therefore do not require a direct power supply.

Mounting accessories supplied as standard for DIN rail mounting.

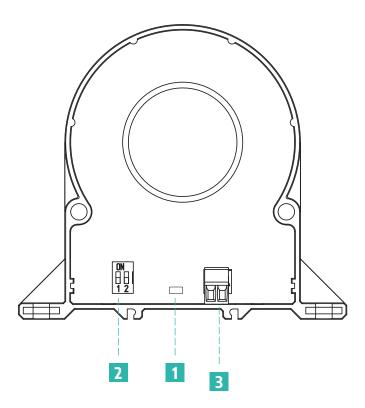

- 1 Status LED
- 2 DIP switch
- 3 4...20mA terminal

# **QI-400-DC-I**PRODUCT MANUAL





#### **TECHNICAL SPECIFICATIONS**

#### **Electrical characteristics**

Power supply	Passive current loop, 11÷30V <sub>DC</sub> with reverse polarity and overtemperature protection
Current consumption	3,5 mA max
Measurable AC/DC current range	400A DC
420mA analogue output range (values that can be set via DIP-switch)	400 Adc, 200 Adc
Measurement type	DC
Accuracy class	<0,5% F.S.
@25°C, 50Hz, PF = 1	
Resolution	12 bits
Measurement Hysteresis	0,2% F.S.
Response delay	1000 ms on analogue output
Isolation	3kV on bare cable
Overload	500A continuous, 2kA impulsive
Output	4÷20 mA



#### **General data**

Working temperature	-15÷60° C
Storage temperature	-40÷85° C
Relative humidity	10÷90% not condensing
Elevation	Up to 2000m a.s.l.
Temperature coefficient	< 200ppm/°C
Protection degree	IP20
Measurements	44x100x90 mm
	44,2 30,5 90
Weight	370 g
Terminal cable cross-section	0.05÷1.5 mm² (30÷14 AWG)
Approvals and certifications	EN55022:2010-12EN55024:2010-11 <b>CEUK</b>
Installation	DIN rail-ready with attachment clips provided

#### **Order codes**

Product:	QI-400-DC-I
Product without logo	QI-400-DC-I-T-NL
Attachment clips	900000012






#### **CONNECTION AND INSTALLATION**

To meet different installation requirements, the unit can be mounted in four different ways (DIN rail or panel mounting, vertical or horizontal).

The system installation is as in the following image:

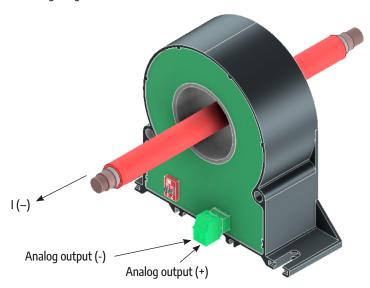

The conductor must be positioned as close to the product centre as possible to ensure correct current measurement.

**WARNING**: strong magnetic fields can alter the values measured by the instrument. Avoid installation near permanent magnets, electromagnets or ferrous masses that can significantly alter the magnetic field. In the event of anomalies, we recommend reorienting the instrument or moving it to a more suitable location.

#### **AVAILABLE MEASUREMENTS**

Depending on the DIP-SWITCH settings, it is possible to vary the measuring range of the QI-400-DC-I to allow for greater accuracy.

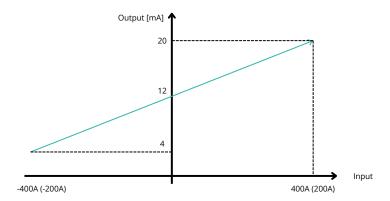


Figure 1: Measurement range

#### **MEASUREMENT CONFIGURATION**

By means of DIP switches 1 and 2, a different measuring range and type can be set:

Description	DIP1
400A DC	0
200A DC	1

**PLEASE NOTE:** to make active all changes via DIP-switch, it is necessary to remove and restore power to the device.