



QI-XXX/X-XX

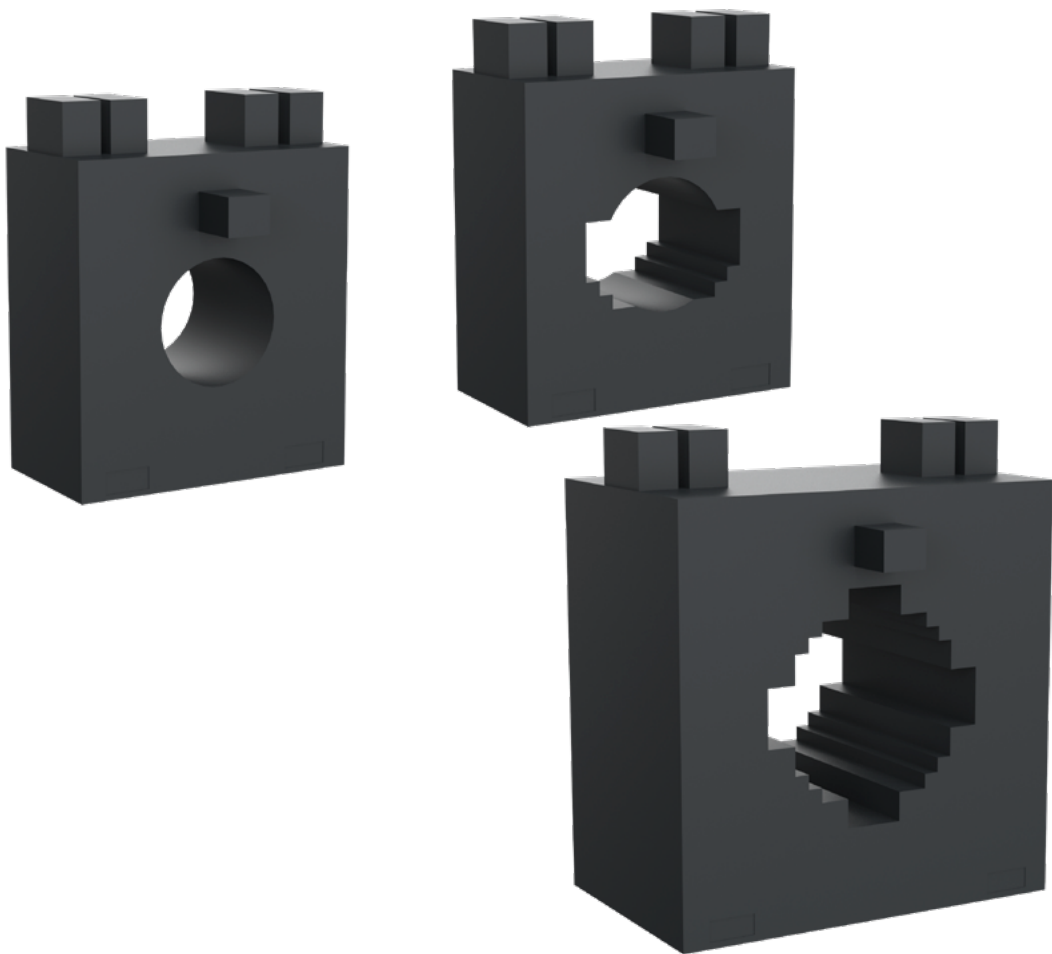

Visit the QI-XXX/X-XX page  
for news, updates and downloads

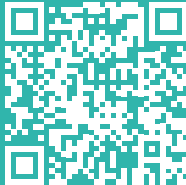

CONTENTS

Product overview .....	3
Technical specifications .....	4
Electrical characteristics .....	4
General data .....	4
Primary current .....	4
Wire section .....	5
Installation .....	5



## SAFETY WARNINGS AND CAUTIONS

The following warnings and cautions must be observed to ensure personal safety and prevent damage.



**Death** or **serious injury** may result from failure to heed this warning.



It is necessary to comply with national regulations when installing and picking materials for power lines.



**Material damage** or **serious personal injury** may result from failure to heed this warning.



Repairs and modifications must be carried out only by the manufacturer. It is forbidden to open the case and make any changes to the device. Tampering with the device will invalidate the warranty.



The manufacturer **declines all responsibility** for electrical safety in the event of improper use of the equipment.



It is essential to read the entire contents of this manual before carrying out any work.



The product described in this document may only be used for the specified application. The maximum performance data and environmental conditions specified in the product data sheet must be observed. Proper transport and storage, as well as professional assembly, installation, handling and maintenance are required for the correct and safe operation of the device.



Before commissioning, make sure that:

- the maximum values for all connections are not exceeded; refer to the product data sheet;
- the connection cables are not damaged or live during wiring;
- the direction of current flow and phase rotation are correct.

Use under ambient conditions other than those specified, application of signals or voltages other than those specified, may cause significant deviations from the specified measurement tolerances, which may be irreversible.

During installation, ensure that a switch or circuit-breaker is near the product and easily accessible.



Although the contents of this document have been checked for accuracy, it may contain errors or inconsistencies and we cannot guarantee its completeness or accuracy.

The unit must be uninstalled if safe operation can no longer be guaranteed (e.g. visible damage). Disconnect all connections in this case. The unit should be returned to the manufacturer or to an authorised service centre for repair.



This document is subject to periodic revision and updating. QEED reserves the right to make changes to the product and/or its technical documentation at any time in the interests of continuous quality improvement. Always consult the latest version of the documentation available on the website:



**WARNING:** High-intensity magnetic fields may alter the values measured by the transformer. Avoid installation near: permanent magnets, electromagnets, or iron masses. If irregularities are detected, reposition or move the unit to a more suitable location.

[www.qeed.it](http://www.qeed.it)

If you find any errors or missing information in this document, please notify us by e-mail to:

[technical@qeed.it](mailto:technical@qeed.it)



Failure to observe the warnings may result in damage to the equipment or failure to operate as intended.



Disposal of waste electrical and electronic equipment (applicable in the European Union and other countries with separate collection). The symbol on the product or its packaging indicates that the product should not be treated as household waste. Instead, it will be handed over to an authorised collection point for the recycling of electrical and electronic waste. Ensuring that the product is disposed of properly will prevent potential negative effects on the environment and human health, which could otherwise be caused by inappropriate waste management of the product. Recycling materials helps to conserve natural resources. For further information, please contact your local authority, waste disposal service or the retailer from whom you purchased the product.



Please note that the information on the nameplate must be observed.





## PRODUCT OVERVIEW

Range of Current Transformers for din rail mounting, class 0,5/1, secondary 5A.

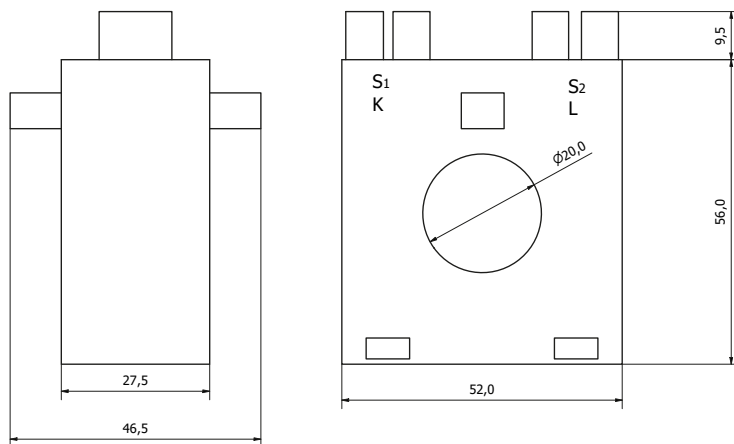


Figure 1: QI-xxx/x-1 dimensions

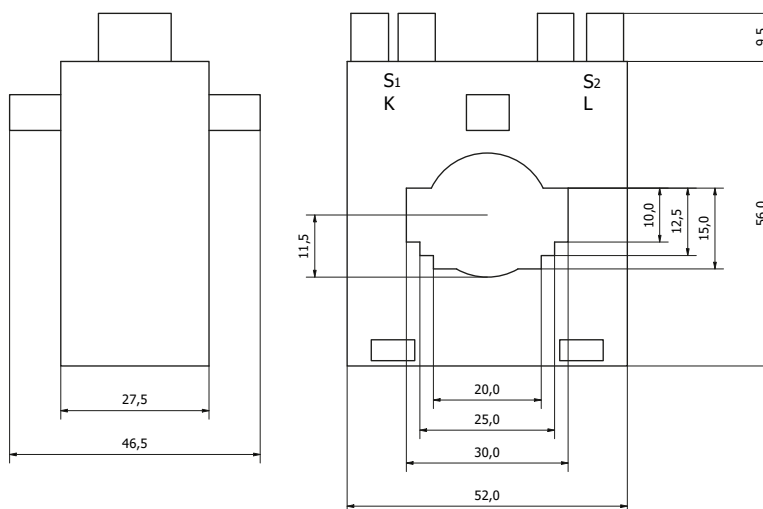


Figure 2: QI-xxx/x-2 dimensions

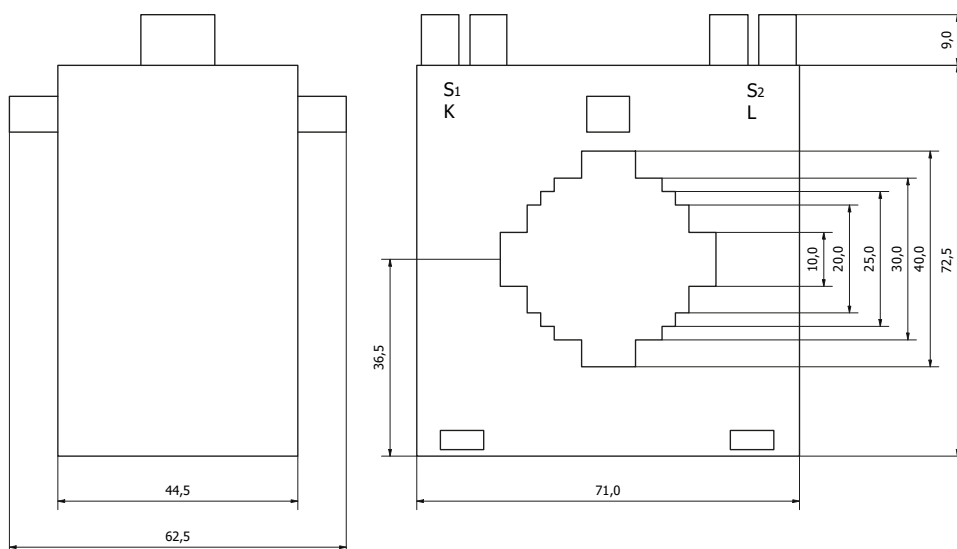


Figure 3: QI-xxx/x-2 dimensions





## TECHNICAL SPECIFICATIONS

### Electrical characteristics

Current to the secondary ( $I_n$ )	5A (other on request)
Sample frequency	40/60 Hz
Dynamic nominal current of short circuit ( $I_{din}$ )	2,5 $I_{ter}$ per 1 sec Max peak value that the CT can withstand having the secondary in short circuit.
Thermal nominal current of short circuit ( $I_{ter}$ )	40 ÷ 80 $I_n$ per 1 sec Max effective value with secondary in short circuit.
Permenent overcurrent	1,2 $I_n$
Voltage insulating reference	0,72 kV maximum Voltage value
Testing voltage	3 kV a 50 Hz per 1 min Max voltage value between primary and secondary
Safety value	$N \leq 5$ Saturation Factor (Sf) or ratio between primary current value (that cause the magnetic core saturation) and the nominal current value. The lower is the N value the higher is the instrument protection

### General data

Working temperature	-20÷50° C
Storage temperature	-40÷80° C
Relative humidity	10÷90% not condensing
Elevation	Up to 2000 m a.s.l..
Protection degree	IP30
Enclosure	ABS self-extinguishing
On air insulation	Class E
Max cable temperature	70° C
Approvals and certifications	CEI 38-1, IEC 185, VDE 0414, EN60044-1, EN60044-1A  

### Primary current

Model	Primary Current A/5	Class 0,5 VA	Class 1 VA
QI-50/5-1	50	-	1
QI-60/5-1	60	-	1
QI-80/5-1	80	1,5	3
QI-100/5-1	100	1,5	3
QI-150/5-1	150	1,5	3
QI-200/5-2	200	1,5	3
QI-300/5-2	300	1,5	3
QI-400/5-2	400	2	4
QI-300/5-3	300	4	6
QI-500/5-3	500	6	10
QI-800/5-3	800	8	15



## Wire section

Wire length Wire section	Secondary 5A						Secondary 1A					
	Volt / Ampere											
	1 m	2 m	4 m	6 m	8 m	10 m	10 m	20 m	40 m	60 m	80 m	100 m
1,5 mm²	0,58	1,15	2,31	3,46	4,62	5,77	0,23	0,46	0,92	1,39	1,85	2,31
2,5 mm²	0,36	0,71	1,43	2,14	2,86	3,57	0,14	0,29	0,57	0,86	1,14	1,43
4 mm²	0,22	0,45	0,89	1,34	1,79	2,24	0,09	0,18	0,36	0,54	0,71	0,89
6 mm²	0,15	0,30	0,60	1,89	1,19	1,49	0,06	0,12	0,24	0,36	0,48	0,60
10 mm²	0,09	0,18	0,36	0,54	0,71	0,89	0,04	0,07	0,14	0,21	0,29	0,36

## INSTALLATION

At the primary, the direction of current flow is intended as input on P1 (or K) and output on P2 (or L) as indicated on the product case.  
Similarly at the secondary S1 (K) is intended as the input and S2 (L) for the output current.

The product is also designed for DIN rail mounting.